



PM-10

KÄYTTÖOHJE MANUAL

PORTABLE BLUETOOTH SPEAKER



KÄYTTÖOHJE

Varmistaaksesi tuotteen toiminnan ja välttääksesi vahingot, lue huolellisesti tämä ohje ennen käyttöä.

Ominaisuudet:

- 2.0CH kannettava Bluetooth kaiutin
- Vesitiivis (IPX6), mukaan rannalle, altaalle, veneilyyn ja kaikkeen ulkoaktiiviteettiin
- TWS toiminto, 2-kanavainen stereotoisto langattomasti.
- Optimoitu Google Assistant ja Siri ääniohjaus.
- Hands-free mikrofoni helppoon vastaamiseen
- RGB Valotehosteet
- A2DP Bluetooth, Langaton musiikintoisto kaikkien yhteensopivien bluetoothlaitteiden kanssa
- USB tuki
- FM radio
- Linja sisäänmeno toiminto(AUX), PC, TV ja MID ääniliitäntälle
- Sisäänrakennettu ladattava lithium-akku 3600mAh
- Olkahihna, helppoon kuljettamiseen

Tekniset tiedot:

Bluetooth versio: V4.2+BR

Elementtien koko: 3" * 2

Vahvistinteho: 10W*2 4Ω RMS

Akkukapasiteetti: 3.7V, 3600mAh

Soittoaika : n. 10h, äänenvoimakkuudesta riippuen

Toistoalue: 59Hz-20kHz



Bluetooth kantama: 10m

Tuotteen mitat: 283(P) *123(L) * 126 (K) mm

Pakkaus sisältää:

- 1xKannettava Bluetooth kaiutin
- 1xLatauskaapeli
- 1xAUX-kaapeli
- 1xKäyttöohje
- 1xOlkahihna

Toiminnot:

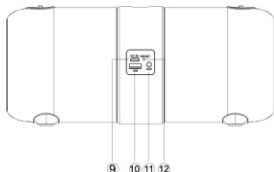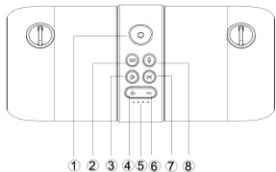


- 1.Virta On/Off
- 2.TWS Painike
- 3.Toisto/Tauko (BOOST MODE)
- 4.Seuraava/Ääni ylös
- 5.Akun varaus
- 6.Edellinen/Ääni alas
- 7.Valintapainike (Bluetooth, USB-tikku, FM radio ja AUX-sisään)
- 8.Siri-Painike
- 9.Latausportti(USB-C)
- 10.USB Portti
- 11.AUX Portti
- 12.Palautuspainike(RESET)



Virta Päälle/Pois

Virtapainikkeen pitkä painallus- virta päälle, Lyhyt painallus- virta pois

Bluetooth:



- Laita laitteeseen virta päälle, Bluetooth moodi on päällä automaattisesti.
- Aktivoi *Bluetooth* puhelimestasi ja etsi laiteluettelosta "PEXMAN-10" ja yhdistä.
- Toista musiikkia laitteestasi ja nauti.
- Pitkä painallus + tai - painiketta laitteesta / tai selaa puhelimellasi valitaksesi haluamasi kappale.
- Lyhyt painallus + tai - painiketta säätää äänentaso. Voit hallita äänentaso myös puhelimestasi.
- Lyhyt painallus  painiketta = toisto / tauko.
- Pitkä painallus TWS painiketta purkaa Bluetooth yhteyden, jonka jälkeen voit muodostaa yhteyden toiseen puhelimeen.

TWS toiminto (True Wireless Stereo):


- Laita virta päälle kahteen samanlaiseen PEXMAN kaiuttimeen, joista haluat muodostaa parin.
- Paina kerran  painiketta parittaaksesi. Kun kuulet "Left speaker" vasemman kanavan kaiuttimesta, yhdistäminen on onnistunut.
- Yhdistä puhelimesi Bluetooth yhteydellä kaiuttimen kanssa, toistaaksesi kahdesta yhdistetystä kaiuttimesta. Näin nautit aidosta stereo-äänestä.
- Paina kerran  painiketta purkaaksesi stereotoiminnon.

HUOM. Jos laiteparin välittömässä läheisyydessä on sähkölaitteita mm. Bluetooth yhteyksiä, saattaa TWS-toiminto häiriintyä.

Huom:

- Kuunnellessasi kahta yhdistettyä kaiutinta (TWS) toiminnolla, kun painat pitkään  painiketta, sekä TWS toiminto että Bluetooth yhteys katkeavat.
- Kun Bluetooth yhteys on aktiivinen ja käyttäjä painaa lyhyesti  painiketta, muodostaakseen TWS parituksen, Bluetooth yhteys katkeaa hetkellisesti. Onnistuneen parituksen jälkeen yhteys palautuu automaattisesti.




Toistaminen USB tikulta:

- Laita virta päälle.
- Kun asetat USB tikun porttiin, kaiutin toistaa sisällön automaattisesti.
- Pitkä painallus + tai - painiketta valitaksesi haluamasi kappaleen, lyhyt painallus + tai - painiketta muuttaaksesi äänenvoimakkuutta.
- Lyhyt painallus  Toisto/Tauko.

Huom: Kun toistat Bluetooth:in kautta, yhteys katkeaa kun laitat USB-tikun porttiin.

Voit kytkeä Bluetooth yhteyden uudelleen valintapainikkeella. 


FM Radio:

- Kytke laitteeseen virta päälle, valintapainiketta  lyhyesti painamalla voit valita FM-radio/Bluetooth tilan välillä.
- Pitkä painallus toistopainiketta  hakeaksesi halutun radiokanavan joka tallentuu automaattisesti. Lyhyt painallus toistopainiketta  mykistää äänen radiotilassa.
- Pitkä painallus + tai - painiketta radiotilassa, vaihtaa kanavaa tallennettujen kanavien välillä, lyhyt painallus muuttaa äänen voimakkuutta.

AUX-IN:

- Muut yhteensopivat laitteet, tai MP3/MP4 soittimesi, käytä mukana tullutta AUX-kaapelia ja liitä se laitteesi "Linja ulos" portista, "AUX" porttiin tähän kaiuttimeen...
- Liitettyäsi AUX-kaapelin kaiuttimeen, laite siirtyy automaattisesti AUX toistotilaan.
- Kun käytät ulkoista äänilähdettä, kaikkia toimintoja voi ohjata laitteestasi.




RGB Valoeffektit

Kun kytket kaiuttimen päälle, valoeffekti on käytössä automaattisesti. Painamalla pitkään  valintapainiketta, saat valoeffektin pois päältä.

Ääniohjauksen aktivointi:

- Aktivoi Bluetooth yhteys puhelimestasi kaiuttimeen.
- Lyhyt painallus "SIRI-painiketta" aktivoi SIRI/GOOGLE AVUSTUKSEN.

Hands-free puhelu:

- Bluetooth yhteyden ollessa aktiivinen, voit vastata saapuvaan puheluun painamalla lyhyesti  painiketta. Pitkä painallus hylkää puhelun.
- Puhelun aikana, pitkä painallus  painiketta siirtää äänen puhelimeen.
- Lyhyt painallus puhelun aikana  painiketta lopettaa puhelun, voit myös katkaista puhelun puhelimesi kautta.

Nollaustoiminto (reset):

Jos kaiutin ei vastaa painalluksiin, lyhyt painallus RESET painikkeeseen (esim. neulalla) palauttaa toiminnan.

Muuta huomautettavaa:

- Oletus äänentaso on 70% maksimi voimakkuudesta.
- Akun toistoikaan vaikuttaa soittoäänenvoimakkuuden taso.

Kuinka lataat:

- Voit ladata kaiuttimen, mukana toimitettavan USB-C kaapelin avulla (5V/1-2A).
- Latausaika n. 4-6h. Kun lataus on valmis, 4 LED valoa palaa yhtäjaksoisesti.
- Kun akun varaus lähenee tyhjää, kaiutin ilmoittaa lataustarpeesta.
- Kaiuttimessa ei ole sisäänrakennettua virtapankkia (Et voi ladata ulkoisia laitteita sen avulla.)

TÄRKEÄÄ:

Kun soitat musiikkia latauksen aikana, älä käytä täyttä äänentasoa, koska paljon bassoa sisältävä musiikki, saattaa tarvita enemmän virtaa hetkellisesti kuin laturi kykenee syöttämään.

Varoitus:

- Älä käytä/säilytä kaiutinta erittäin kuumassa paikassa.
- Vältäaksesi kuulovauriot ja pidentääksesi akun käyttöikää, vältä kuuntelua täydellä äänentasolla.
- Kaiuttimen puhdistus kuivalla ja pehmeällä liinalla. Tahroihin vain vedellä kostutettu liina.

Boost mode ™

- Lähtökohtaisesti pexman kaiutin on asetettu "natural sound" tilaan käynnistyksen jälkeen.
- Paina play nappia 2sek aktivoidaksesi BOOST MODE tilan, joka tuo soundiin huomattavasti lisää dynamiikkaa.
- Optimaalinen varsinkin ulkotiloissa käytettynä.
- Suurella äänenvoimakkuudella soittaessa tällä asetuksella virrankulutus huomattavasti suurempi ja myös kappaleesta tai mobiililaitteesta riippuen, ääni saattaa säröytyä.

MANUAL

To ensure correct operation and avoid damage, please read this user manual carefully before using this product.

Features:

- 2.0CH portable Bluetooth fabric speaker
- Water resistant IPX6, perfect for beach, poolside, boat and more outdoor activities
- TWS function, achieve true wireless playing with double enhanced stereo sound
- Optimized Google Assistant and Siri voice control
- Hands-free Mic for easy picking up the call
- RGB Lighting
- With A2DP Bluetooth, wireless stream music from any Bluetooth-enabled device
- USB support
- FM radio
- Line-in function, suitable for PC, MID, TV and other audio devices
- Built-in lithium rechargeable battery 3600mAh
- Shoulder strap, easy to take out

Specifications:

Bluetooth version: V4.2+BR

Speaker Size: 3 inch*2

Amplifier output: 10W*2, 4Ω RMS

Battery Capacity: 3.7V, 3600mAh

Play Time: 10 hours depending volume

Frequency Response: 59Hz-20kHz



Bluetooth connecting range: 10m

Product size: 283(L) *123(W) * 126 (H) mm

Package Contents:

- 1xPortable Bluetooth speaker
- 1xCharging cable
- 1xAudio cable
- 1xUser manual
- 1xShoulder strap

Product Details:

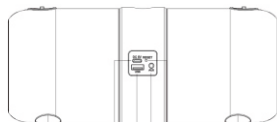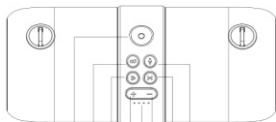

① ② ③ ④ ⑤ ⑥ ⑦ ⑧



⑨ ⑩ ⑪ ⑫

- 1.Power On/Off
- 2.TWS Button
- 3.Play/Pause (BOOST MODE)
- 4.Forward/Volume Up
- 5.Battery Indicator
- 6.Backward/Volume Down
- 7.Mode Button (turn the modes among Bluetooth, USB disk, FM radio and AUX-IN)
- 8.Siri Button
- 9.Charging Jack
- 10.USB Port
- 11.AUX Port
- 12.RESET Jack



Power On/Off

Long-press the Power button to turn the speaker on, short-press the Power button to turn the speaker off.



Bluetooth:

- Turn the power button to "ON", the speaker enter Bluetooth mode automatically.
- Activate *Bluetooth* of mobile phone and search for device name "PEXMAN-10" then connect it.
- Play the music from your mobile phone and enjoy.
- Long-press Forward or Backward button on the device or operate on Mobile phone to select songs you like.
- Short-press Forward or Backward button to adjust volume up and down. Or adjust the mobile phones' volume.
- Short-press  Play/Pause button on the device or operate on Mobile phones to play/pause the music.
- Long-press  TWS button to disconnect Bluetooth connection, then make Bluetooth connection with other mobile phone.


TWS Function:


- Turn on two identical speakers you want to pair, both under BT mode. Only need to set one of the two units.
- Short-press the  TWS button to pair, a tone "left speaker" will be audible from left channel and TWS button will keep lighting after paired successfully.
- Make Bluetooth connection with your mobile phone to play music by the two paired Speakers.
- Short-press the  TWS button again to exit the TWS connection.

Note: Electric devices and other Bluetooth connections nearby, may cause disturbance to TWS function.




- Under TWS mode and Bluetooth connected, when user long-press the  TWS button, both the TWS connection and Bluetooth connection will be disconnected.
- When Bluetooth connected, if user short-press  TWS button to make TWS connection, the Bluetooth connection will be disconnected for a short time, after TWS paired, the Bluetooth will be connected again.

Playing music from USB disk:

- Turn the Power button to "ON".
- Insert USB flash disk into slot, the speaker will play the stored music automatically.
- Long-press Forward or Backward button to select songs you like, short-press to adjust the volume up and down.
- Short-press  Play/Pause to play or pause.

Notes: Under Bluetooth playing mode, insert USB disk will disconnect the Bluetooth and switch to play the USB disk. You can short-press the  MODE button to switch to Bluetooth mode again.

FM Radio:

- Turn the power button to "ON", short-press the  "MODE" button to enter radio state.
- Long-press  "Play/Pause" button to auto search the FM Channel and store it automatically. Short-press  "Play/Pause" button to mute the speaker.
- Long-press Forward or Backward button to change the stored FM channel, short-press to adjust the volume up and down.

AUX-IN:

- For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this device, then enjoy...
- Under any playing mode, when you use the audio cable to connect the device, it will auto-switch to the AUX mode.
- When using an external device, all functions can be controlled by the external device.





RGB Lighting

When the speaker is turned on, the RGB light is on automatically, user can long-press the  Mode button to switch the RGB light on and off.

Activating Voice Assistant:

- Make Bluetooth connection with your mobile phone.
- Short-press Siri button to activate voice assistant SIRI/GOOGLE ASSISTANT.

Hands-free call:

- Under Bluetooth connection status, if there is an incoming call, user can short-press  Play/Pause button to accept the call or long-press  Play/Pause button to reject the call.
- During the call, user can long-press  Play/Pause button to switch to talking on the phone.
- Short-press  Play/Pause button or operate on mobile phone to end the call.

Reset Functionality:

If the speaker does not turn off or respond, user can short-press the RESET jack with a small round pin to reset the speaker.

More Remarks:

- Default volume is at 70% status of max volume.
- Play time may vary depending on volume level and music style.

How to charge:

- The charger is not included in the package, please charge the speaker via a standard 5V/1-2A charger or via a PC.
- Charge time should be 4-6 hours. After full charging, the 4 LEDs keep lighting.
- When battery voltage is low, the speaker will prompt for recharging.
- The unit does not have power bank function, it is forbidden to charge other device via this unit or to connect other device via the USB port.


IMPORTANT:

When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may not be able to afford the high current temporarily under the maximum volume.

Warning:

- Don't use/store this speaker in extreme temperatures.
- Please store it in cool and dry area, keep away from anything that generates heat, such as radiators, stoves, etc.
- In order to have hearing protection and an extended speaker life, avoid listening to songs on maximum volume.
- When cleaning this speaker, use a soft dry cloth. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

Boost mode ™

- Default sound mode is "natural sound" after turned power on.
- Press  play button 2s to activate BOOST MODE, which adds remarkably more dynamics to sound . Its optimal for using outdoors specifically.
- Playing with BOOST MODE at high volume, power consumption may increase notably and depending the song and your device, sound may distort.



Designed in Finland

WWW.PEXMAN.COM

PEXMAN is a trademark of
Oy Audioimport Group Ab
info@audioimport.fi